

EZ-DPD*

Dispenser for Free Chlorine

Each EZ-DPD* dispenser vial contains enough DPD reagent to perform 200 tests. This Free Chlorine test kit works for 5 ml or 10 ml sample sizes. The dispenser is a gravity system; it will work properly when used vertically as shown in the drawing below. The dispenser is suitable for use with the following Hach* products:

Hach* model and catalog number


Pocket Colorimeter* (46700-00)	Color disc (2231-01 and 2231-02)
Color cube (20604-00)	AccuVac* Kit Color disc (25030-50)

Storage

Store at 2°C–25°C, away from light. Expiration date on box label refers to unopened material. Once reagent vial is opened, use within six months.

Directions

1. Refer to your test kit instruction manual for sample preparation. At the point where the manual directs you to add reagent, proceed as outlined below.
2. Shake dispenser before each dispense to ensure free flow of powder.
3. Remove the cap from the dispenser.
4. Place the dispenser over the top of the sample container.
5. Fully depress the button on the dispenser and then release.
6. Close the cap on the dispenser.
7. Cover the sample container and shake to dissolve the DPD powder.
8. When testing for free chlorine, read the test result immediately.
9. Record the results in the appropriate manner.

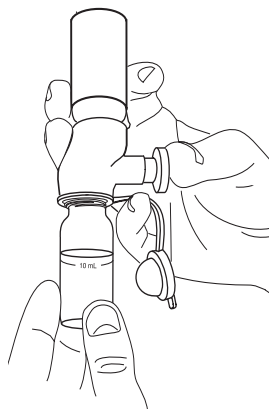

Installation and refill instructions

1. To install a new reagent vial, unscrew empty vial from the EZ DPD* dispenser. Dispose of empty vial properly.
2. In a dry location, uncap new vial and screw into dispenser. Tighten the dispenser until snug.

For technical support, please call:

North/South America: +1 207 556 4496
or 1 800-321 0207
Europe: +00800 4339 9111
UK: +44 01638 676800

China: +86 21 61279528
Japan: +81 422 71 5921
Australia: +1800 443 399

idexx.com/water

*EZ-DPD is a trademark or registered trademark of IDEXX Laboratories, Inc. or its affiliates in the United States and/or other countries. Hach, AccuVac and Pocket Colorimeter are trademarks or registered trademarks of the Hach Company in the United States and/or other countries.

Patent information: idexx.com/patents.

© 2013 IDEXX Laboratories, Inc. All rights reserved. • 06-04345-04

IDEXX

One IDEXX Drive
Westbrook, Maine 04092 USA

EZ-DPD*

Dispenser for Free Chlorine

Each EZ-DPD* dispenser vial contains enough DPD reagent to perform 200 tests. This Free Chlorine test kit works for 5 ml or 10 ml sample sizes. The dispenser is a gravity system; it will work properly when used vertically as shown in the drawing below. The dispenser is suitable for use with the following Hach* products:

Hach* model and catalog number


Pocket Colorimeter* (46700-00)	Color disc (2231-01 and 2231-02)
Color cube (20604-00)	AccuVac* Kit Color disc (25030-50)

Storage

Store at 2°C–25°C, away from light. Expiration date on box label refers to unopened material. Once reagent vial is opened, use within six months.

Directions

1. Refer to your test kit instruction manual for sample preparation. At the point where the manual directs you to add reagent, proceed as outlined below.
2. Shake dispenser before each dispense to ensure free flow of powder.
3. Remove the cap from the dispenser.
4. Place the dispenser over the top of the sample container.
5. Fully depress the button on the dispenser and then release.
6. Close the cap on the dispenser.
7. Cover the sample container and shake to dissolve the DPD powder.
8. When testing for free chlorine, read the test result immediately.
9. Record the results in the appropriate manner.

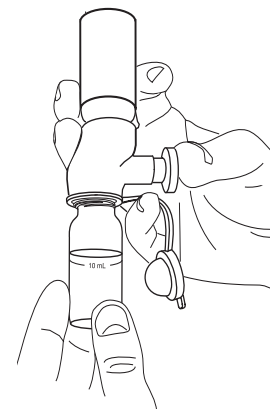

Installation and refill instructions

1. To install a new reagent vial, unscrew empty vial from the EZ DPD* dispenser. Dispose of empty vial properly.
2. In a dry location, uncap new vial and screw into dispenser. Tighten the dispenser until snug.

For technical support, please call:

North/South America: +1 207 556 4496
or 1 800-321 0207
Europe: +00800 4339 9111
UK: +44 01638 676800

China: +86 21 61279528
Japan: +81 422 71 5921
Australia: +1800 443 399

idexx.com/water

*EZ-DPD is a trademark or registered trademark of IDEXX Laboratories, Inc. or its affiliates in the United States and/or other countries. Hach, AccuVac and Pocket Colorimeter are trademarks or registered trademarks of the Hach Company in the United States and/or other countries.

Patent information: idexx.com/patents.

© 2013 IDEXX Laboratories, Inc. All rights reserved. • 06-04345-04

IDEXX

One IDEXX Drive
Westbrook, Maine 04092 USA